

CENTER BEARING CATALOGUE-2022

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
1	RP05-18001	37208-87302		CENTER BEARING	DAIHATSU	DAIHATSU Delta V12,22, V32
2	RP05-29001	4 060 617 4 104 708 95VB 4826AA 92VB 4826CA		CENTER BEARING	FORD	FORD TRANSIT Bus/Kasten/Pritsche/Fahrgestell 91-00
3	RP05-61001	00053-01- 2202081-022 53-1-2202081- 22		CENTER BEARING	GAZ	GA3-3310,3309,53
4	RP05-61002	03302-00- 2202081-000 3302-2202081		CENTER BEARING	GAZ	GA3-3302 (2004), GA3-2705
5	RP05-03001	2241100-K00		CENTER BEARING	GREATWALL	Hover H3 H5
6	RP05-59001	37230-1210		CENTER BEARING	HINO	Truck
7	RP05-24001	51328-48A00		CENTER BEARING	HYUNDAI	H1 H200 STAREX SANTA FE 2005
8	RP05-16001	8-97131143-0 8-97131143-1	32951303611	CENTER BEARING	ISUZU	ISUZU NPR 4HK1
9	RP05-16002	8-97103-546-1 8-97025-752-0	2-90588-910-0 2-90588-900-0	CENTER BEARING	ISUZU	HONDA PASSPORT 1991-1997 ISUZU TROOPER 4X4 1991-2001 ISUZU RODEO 1994-1997
10	RP05-16003	1-37516-059-0		CENTER BEARING	ISUZU	ISUZU FSR ISUZU FTR ISUZU SBR ISUZU JCR
11	RP05-16004	98020880 94043958 5-37510-007-1 5-37510-007-0 8-98020-880-0	32951303612	CENTER BEARING	ISUZU	Isuzu NQR Isuzu NPR
12	RP05-16005	8-94328800-D		CENTER BEARING	ISUZU	ISUZU TFR54
13	RP05-16006	8-94328-799-0	8-94328799-D JIKIU-BC24002	CENTER BEARING	ISUZU	ISUZU CAMPO 4WD (KBD47) 1983-1990 ISUZU PICKUP TFR 1997-2003
14	RP05-16007	5-53215-005-0 5-37516-005-0 1-37516-005-1		CENTER BEARING	ISUZU	ISUZU N-Serie NPR 300 08/09 - /
15	RP05-16008	1-37510-091-0 1-37510-105-0		CENTER BEARING	ISUZU	ISUZU FORWARD (FTR FSR) 84-
16	RP05-16009			CENTER BEARING	ISUZU	
17	RP05-16010	1-37510-035-0 1-37516-006-1		CENTER BEARING	ISUZU	ISUZU FORWARD (SB SC SD_ 82-
18	RP05-16011	9-37516-030-0 1-37516-030-0		CENTER BEARING	ISUZU	ISUZU TLD32/52/55

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
19	RP05-16012	1-37516-046-0 1-37516-043-0		CENTER BEARING	ISUZU	
20	RP05-16013	1-37516-047-2		CENTER BEARING	ISUZU	
21	RP05-16014	1-37516-048-1 1-37516-048-2		CENTER BEARING	ISUZU	
22	RP05-16015	1-37516-049-1 1-37516-068-1		CENTER BEARING	ISUZU	
23	RP05-16016	8-94328-800-0		CENTER BEARING	ISUZU	ISUZU 3.1L V6 1991-1993 ISUZU 2.6L L4 1990 ISUZU PICKUP 2.3L L4 1990
24	RP05-16017	8-94202-521-0 8-94328-520-0 8-94202-521-1		CENTER BEARING	ISUZU	ISUZU KBZ (2200)
25	RP05-16018	8-94222-972-0		CENTER BEARING	ISUZU	ISUZU JACKAROO ISUZU FASTER (KB21 KB26 KB41)
26	RP05-16019	8-94222-970-0		CENTER BEARING	ISUZU	ISUZU LUV 1600/2000
27	RP05-50001	TOQ000040 TOQ000010		CENTER BEARING	LANDROVER	LAND ROVER Freelander 96-06
28	RP05-15001	P030-25-310		CENTER BEARING	MAZDA	MAZDA B2200 2.2L L4 1990-1993
29	RP05-15002	W001-25-321		CENTER BEARING	MAZDA	MAZDA T4000 T4100 1984-1992 MAZDA T3500 1989-2006 MAZDA T3000 1984-2006 MAZDA T2600 1984-2006 MAZDA T2500 1984-2003 MAZDA T2000 1984-2006
30	RP05-15003	SA02-25-310		CENTER BEARING	MAZDA	MAZDA PROCEED (UN) 2.5 D 99/11-01/12 MAZDA PROCEED (UN) 2.5 D 99/06-/ FORD RANGER (ER, EQ) 2.5 D 99/10-02/04
31	RP05-15004	SA04-25-310		CENTER BEARING	MAZDA	KIA Sportage II 2004- FORD Ford Courier 1999-2006 FORD Ford Ranger 4X4 1998- MAZDA B4000 2005-2006 MAZDA B2500,B2600 1998-2005
32	RP05-15005	P065-25-310C		CENTER BEARING	MAZDA	
33	RP05-15006	SA51-25-300		CENTER BEARING	MAZDA	CHEVROLET OPALA Saloon 2.5 71/01-81/12 MAZDA PROCEED (UN) 2.5 D 99/11-01/12 MAZDA PROCEED (UN) 2.5 D 02/12-/ MAZDA PROCEED (UN) 2.5 D 99/06-/ MAZDA PROCEED (UN) 2.5 TD 4WD 99/06-06/07
34	RP05-43001	2D0 521 351 901 411 04 12 901 411 03 12		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ Sprinter 3-T Platform/Chassis 02.1995 - 05.2006 MERCEDES-BENZ Sprinter 3-T Minibus 02.1995 - 05.2006 MERCEDES-BENZ Sprinter 3-T Van 02.1995 - 05.2006 MERCEDES-BENZ Sprinter 2-T Platform/Chassis 01.1995 - 05.2006 MERCEDES-BENZ Sprinter 2-T Minibus 02.1995 - 05.2006 MERCEDES-BENZ Sprinter 2-T Van 02.1995 - 05.2006
35	RP05-43002	601 410 12 10		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ T1
36	RP05-43003	601 586 00 41 601 410 50 10 601 410 17 10 601 410 15 10 601 410 04 10		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ T1

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
37	RP05-43004	201 410 07 15 202 410 10 15		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ E-Class T-modell 06.1993 - 06.1996 MERCEDES-BENZ E-Class Saloon 06.1995 - 03.2002 MERCEDES-BENZ E-Class Saloon 06.1993 - 06.1995 MERCEDES-BENZ C-Class T-modell 06.1996 - 03.2001 MERCEDES-BENZ C-Class Saloon 03.1993 - 05.2000 MERCEDES-BENZ 190 10.1982 - 08.1993
38	RP05-43005	201 410 05 81		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ 190 (W201) 10.1982 - 08.1993
39	RP05-43006	124 410 01 81 S 124 410 06 81 S		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ W124 MERCEDES-BENZ E-Class
40	RP05-43007	124 410 01 81 1244100681		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ W124
41	RP05-43008	123 410 10 81 S		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ W123 Estate 09.1977 - 11.1985 MERCEDES-BENZ W123 Coupe 03.1977 - 12.1985 MERCEDES-BENZ SL Coupe 01.1972 - 09.1981 MERCEDES-BENZ SL Convertible 05.1971 - 08.1989 MERCEDES-BENZ W123 Saloon 02.1976 - 12.1985 MERCEDES-BENZ S-Class Saloon 08.1972 - 07.1980
42	RP05-43009	116 410 30 81 116 410 29 81 116 410 27 81 107 410 22 81 107 410 21 81 123 410 10 81		CENTER BEARING	MERCEDES-BENZ	MERCEDES-BENZ W123 Estate 09.1977 - 11.1985 MERCEDES-BENZ W123 Coupe 03.1977 - 12.1985 MERCEDES-BENZ SL Coupe 01.1972 - 09.1981 MERCEDES-BENZ SL Convertible 05.1971 - 08.1989 MERCEDES-BENZ W123 Saloon 02.1976 - 12.1985 MERCEDES-BENZ S-Class Saloon 08.1972 - 07.1980
43	RP05-13001	MB154706 MN171429 MR223119		CENTER BEARING	MITSUBISHI	MITSUBISHI TRITON 1996-2007 MITSUBISHI STRADA 1997-1999 MITSUBISHI L200 1996-2007
44	RP05-13002	MR580647	M29T0204 RU-553 GOM-553 MCB-KB4 3450A017	CENTER BEARING	MITSUBISHI	MITSUBISHI Triton MITSUBISHI L200
45	RP05-13003	MB00083	D35MM	CENTER BEARING	MITSUBISHI	MITSUBISHI CANTER (FE111,FE211)
46	RP05-13004	MB000076	D35MM	CENTER BEARING	MITSUBISHI	MITSUBISHI CANTER (FE111,FE211)
47	RP05-13005	MB000078		CENTER BEARING	MITSUBISHI	MITSUBISHI CANTER (FE111,FE211) 80-
48	RP05-13006	MB860251		CENTER BEARING	MITSUBISHI	
49	RP05-13007	MC881040		CENTER BEARING	MITSUBISHI	MITSUBISHI FIGHTER
50	RP05-13008	MB563234		CENTER BEARING	MITSUBISHI	MITSUBISHI CANTER 449
51	RP05-13009	MC-830615		CENTER BEARING	MITSUBISHI	MITSUBISHI CANTER FE.444 86-95
52	RP05-13010	MC-830616		CENTER BEARING	MITSUBISHI	
53	RP05-13011	12019-25403		CENTER BEARING	MITSUBISHI	

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
54	RP05-13012	ME-802792 ME-8029792		CENTER BEARING	MITSUBISHI	
55	RP05-13013	MB-802962 MC-824414 MB-8020962		CENTER BEARING	MITSUBISHI	MITSUBISHI FUSO (FK415, FK515) 85-
56	RP05-13014	MB-154080		CENTER BEARING	MITSUBISHI	MITSUBISHI LANCER (A161) DODGE RAM50 83-86 MITSUBISHI L200 (L021P,L025P) 79-89
57	RP05-13015	MB000815		CENTER BEARING	MITSUBISHI	MITSUBISHI L 200 (K7_T, K6_T) 06.1996-12.2007 MITSUBISHI Delica / Space Gear MPV 05.1995-10.2002 MITSUBISHI COLT V (CJ_, CP_) 05.1996-09.2003 MITSUBISHI COLT IV (CA_A) 04.1992-04.1996 MITSUBISHI COLT III (C5_A) 04.1988-05.1992 MITSUBISHI COLT II (C1_A) 02.1984-04.1988
58	RP05-13016	491304A00D GCB61999 MR165252		CENTER BEARING	MITSUBISHI	MITSUBISHI L 400 Box (PD_W, PC_W, PB_V, PA_W, PA_V) 2500 TD (PD5W, PD5V, PA5W, PA5V) 96/09-05/06 MITSUBISHI L 400 / SPACE GEAR Bus (PD_W, PC_W, PA_V, PB_V, PA_W) 2500 TD 95/05-05/06 MITSUBISHI L 400 / SPACE GEAR Bus (PD_W, PC_W, PA_V, PB_V, PA_W) 2.5 TD (PA5V/W, PB5V) 95/05-00/05 MITSUBISHI L 400 / SPACE GEAR Bus (PD_W, PC_W, PA_V, PB_V, PA_W) 2.0 16V (PA3V/W, PB3V, PA3W) 95/05-00/05
59	RP05-14001	37522-JR60A		CENTER BEARING	NISSAN	NISSAN NP300 Navara Pickup (D40) 2005-
60	RP05-14002	37521-B5001 37521-B5000		CENTER BEARING	NISSAN	
61	RP05-14003	37521-F4025		CENTER BEARING	NISSAN	Nissan DATSUN (D21)
62	RP05-14004	37521-36G25 37521-35G25		CENTER BEARING	NISSAN	NISSAN HARDBODY/SANI
63	RP05-14005	37522-34G00		CENTER BEARING	NISSAN	NISSAN PICK UP D22,PATHFINDER 4x4 86-95
64	RP05-14006	37521-01W25		CENTER BEARING	NISSAN	NISSAN PICK UP (720) 1.6 80/12-84/05 NISSAN PICK UP (720) 2.2 D 82/01-84/01 NISSAN PICK UP (720) 2.3 D 83/04-86/03 NISSAN PICK UP (720) 1.8 83/01-86/03
65	RP05-14007	37521-Q0125		CENTER BEARING	NISSAN	NISSAN DATSUN 2WD (D21) 85-93 NISSAN DATSUN SKYLINE (P30) 81- NISSAN DATSUN GLORIA (SD22 Z20) 79- NISSAN DATSUN CEDRIC (430) 79- NISSAN DATSUN MAXIAM (200SX) 82-86 NISSAN DATSUN BLUEBIRD (910 Z18P) 76-
66	RP05-14008	37521-41L25		CENTER BEARING	NISSAN	NISSAN BLUEBIRD Traveller (W910) 1.8 80/01-84/05 NISSAN BLUEBIRD Saloon (910) 1.6 80/01-83/11 NISSAN BLUEBIRD Saloon (910) 2.0 TD 83/01-83/09 NISSAN BLUEBIRD Saloon (910) 2.0 i 82/01-83/12 NISSAN BLUEBIRD Saloon (910) 2.0 D 80/01-83/12 NISSAN BLUEBIRD Saloon (910) 1.8 80/01-83/12
67	RP05-14009	37521-85L25		CENTER BEARING	NISSAN	NISSAN Skyline HR32 , Eng: 2.0L RB20D 05.89-08.91
68	RP05-14010	37518-90009 37518-Z5002		CENTER BEARING	NISSAN	

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
69	RP05-14011	C7521-56G27 37521-56G26 37521-56G27 37521-56G25 37521-34G25 37521-33G25	NCB-002 RU-106 GOM-106	CENTER BEARING	NISSAN	NISSAN NAVARA Pickup (D21) 2.4 4WD 92/01-96/12 NISSAN NAVARA Pickup (D21) 2.4 92/01-96/12 NISSAN NAVARA Pickup (D21) 2.4 85/09-96/12 NISSAN NAVARA Pickup (D21) 2.5 D 4WD 86/03-91/08 NISSAN NAVARA Pickup (D21) 2.4 i 12V 4WD 92/04-98/02 NISSAN NAVARA Pickup (D21) 2.4 i 4WD 86/03-92/04
70	RP05-14012	37521-W1085 C7521-W1085 37521-W1029 37521-W1025		CENTER BEARING	NISSAN	NISSAN NAVARA (D22) 2.5 D 4WD 98/02- NISSAN BLUEBIRD Saloon (910) 1.6 80/01-83/11 NISSAN BLUEBIRD Saloon (910) 2.0 i 82/01-83/12 NISSAN BLUEBIRD Saloon (910) 2.0 D 80/01-83/12
71	RP05-14013	37521-41L00		CENTER BEARING	NISSAN	
72	RP05-45001	7L0521102D		CENTER BEARING	PORSCHE	VW Touareg PORSCHE Cayenne
73	RP05-11001	37230-35013 37230-35010		CENTER BEARING	TOYOTA	TOYOTA
74	RP05-11002	37230-0K040	J2912000 T2947X2 TCB-KDN145 37230-0K050 37230-0K030 37230-34010 37230-35120	CENTER BEARING	TOYOTA	TOYOTA Tacoma 2005-2016 TOYOTA Hilux 2004-2018 TOYOTA Fortuner 2005-2013 TOYOTA Tundra 1999-2006
75	RP05-11003	37230-35060		CENTER BEARING	TOYOTA	TOYOTA HIACE
76	RP05-11004	37230-36081 37230-36080		CENTER BEARING	TOYOTA	Toyota COASTER (RB20,BB20)
77	RP05-11005	37230-28010		CENTER BEARING	TOYOTA	Toyota Previa 1991-1997
78	RP05-11006	04374-28011		CENTER BEARING	TOYOTA	Toyota Previa
79	RP05-11007	37230-36021 37230-35021 37230-36020 37230-36H00		CENTER BEARING	TOYOTA	TOYOTA DYNA BU30 1981 TOYOTA DYNA BU20 1977
80	RP05-11008	37230-35130		CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 TD 4WD 98/08-02/01
81	RP05-11009	37230-35061		CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.0 4WD 85/08-88/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 4WD 84/01-88/08 VW TARO 2.4 D 4x4 89/04-97/03 VW TARO 2.2 4x4 89/06-94/07 VW TARO 2.4 D 4x4 94/07-97/03 VW TARO 2.4 i 4x4 89/06-97/03
82	RP05-11010	37230-35050		CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.2 4WD (YN106_, YN110_) 87/01-89/12 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.0 84/01-86/12 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 4WD 94/01-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 i 4WD 89/06-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 i 4WD 89/06-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 92/01-05/07

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
83	RP05-11011	37230-0K020 37230-0K021 37230-0K011 37230-0K010	GOM-282 TCB-025	CENTER BEARING	TOYOTA	TOYOTA KIJANG TOYOTA INNOVA TOYOTA FORTUNER TOYOTA HILUX (VIGO) III Pickup (TGN1_, GGN2_, LAN_, GGN1_, KUN2_, K 2.5 D-4D 05/07-/ TOYOTA HILUX (VIGO) III Pickup (TGN1_, GGN2_, LAN_, GGN1_, KUN2_, K 2.5 D-4D 07/12-/
84	RP05-11012	37230-24010 37230-24020		CENTER BEARING	TOYOTA	TOYOTA HILUX (N8,N9,N11) 2x4 08.88-07.97
85	RP05-11013	37230-35070 37230-35030		CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.2 4WD (YN106_, YN110_) 87/01-89/12 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.0 84/01-86/12 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 4WD 94/01-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 i 4WD 89/06-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 i 4WD 89/06-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 92/01-05/07
86	RP05-11014	37230-87302		CENTER BEARING	TOYOTA	Daihatsu (V109 V116 V119)
87	RP05-11015	37230-35040		CENTER BEARING	TOYOTA	TOYOTA STOUT RK110 1979/03-1986/03
88	RP05-11016	37230-BZ010		CENTER BEARING	TOYOTA	DAIHATSU TERIOS (J2_) 1.3 VVT-i 4x4 05/11-/ DAIHATSU TERIOS (J2_) 1.5 4x4 06/05-/
89	RP05-11017	5-37516-006-0 5-53215-006-0		CENTER BEARING	TOYOTA	ISUZU NKR / NHR ISUZU NQR 2004-2016 ISUZU NPR NPR-HD 2004-2016
90	RP05-11018	37230-22130 37230-22170 37230-22140		CENTER BEARING	TOYOTA	TOYOTA CRESSIDA (RX80,LX80) 88-90 TOYOTA CRESSIDA (GX81,RX80V) 88-90
91	RP05-11019	37230-26010		CENTER BEARING	TOYOTA	TOYOTA QUANTUM III Bus (LH1_, RZH1_) 2.4 D (LH102) 89/08-95/08
92	RP05-11020	37230-22200	37230-22190	CENTER BEARING	TOYOTA	TOYOTA CHASER (_X9_) 2.5 Turbo (JZX90) 92/10-96/08 TOYOTA CHASER (_X9_) 2.5 (JZX90, JZX93) 92/10-96/08 TOYOTA Mark II TOYOTA Cresta TOYOTA Chaser
93	RP05-11021	37230-35080	37230-35100 T294X20 TCB-009	CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.0 4WD 85/08-88/07 TOYOTA 4 RUNNER (RN10_, VZN13_, VZN10_, RN13_) 2.4 TD 89/08-95/11 TOYOTA 4 RUNNER (RN10_, VZN13_, VZN10_, RN13_) 3.4 i 95/11-96/03 TOYOTA 4 RUNNER (RN10_, VZN13_, VZN10_, RN13_) 2.7 i 95/11-96/03 TOYOTA 4 RUNNER (RN10_, VZN13_, VZN10_, RN13_) 3.0 V6 (VZN 130) 90/07-95/11 TOYOTA 4 RUNNER (RN10_, VZN13_, VZN10_, RN13_) 3.0 Turbo-D (KZN 130) 93/10-96/03
94	RP05-11022	37230-38010		CENTER BEARING	TOYOTA	TOYOTA ZACE (KF50) 91- TOYOTA KIJANG (KF60,CF50) 91-
95	RP05-11023	37230-42010		CENTER BEARING	TOYOTA	TOYOTA RAV 4 ? (SXA1_) 2.0 4WD 94/06-00/06
96	RP05-11024	37230-29055		CENTER BEARING	TOYOTA	TOYOTA HIACE LH200 2005-2013

S/N.	REF SMR.	REF OE.	REF NO.	DESCRIPTION	CAR BRAND	FITMENT
97	RP05-11025	37230-35120		CENTER BEARING	TOYOTA	TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.5 D-4D 01/11-05/07 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D (LN150, LN145) 98/07-02/01 TOYOTA HILUX II Pickup (RN6_, RN5_, LN6_, YN6_, YN5_, LN5_) 2.4 D 95/03-05/07
98	RP05-11026	37230-38030		CENTER BEARING	TOYOTA	TOYOTA Surf2.4L 1999-2007
99	RP05-11027	37230-36062 37230-36061 37230-36063		CENTER BEARING	TOYOTA	TOYOTA Dyna Platform / Chassis (U20, U30, U60, U80) 08.1977 - 08.1987 TOYOTA Dyna 200 Platform / Chassis (U60-U80) 01.1985 - 05.1995 TOYOTA Dyna 200 Platform / Chassis 06.1995 - 05.1999 TOYOTA Coaster Minibus (_B2_, _B3_) 10.1987 - 01.1993

